CMB-673

Mini Barebone system Intel Pentium M Platform

Installation Guide Edition 1.0 2005/08/20





CMB-673 Installation Guide

Document Content:

- Packing List
- Product Specification
- Hardware Installation

Packing List:

CMB-673 Chassis x 1 (Including LV-673 Motherboard)




SPD-120-12A 120W AC-DC Adapter x 1 Power Cord x 1 CPU Cooler x 1 44-pin to 44-pin ATA33 IDE Cable x1 SDTV Cable x 1 YPbPr Cable x 1 Serial ATA 90 to 180 cable x 2 44 Pin CD- ROM Adapter X 1





Chassis Setup Sequence:

1. Screw up in Back of plastic panel.

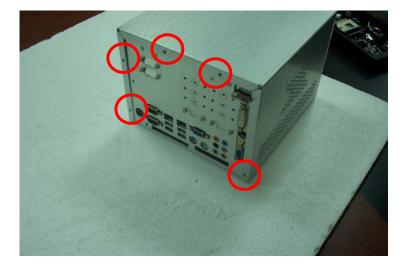


2. Screw up the HDD bay .




3

CMB-673 Installation Guide


3. Please take out the HDD drive bay.

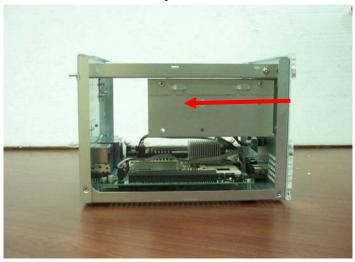


4. Please pull out the USB , Audio and JFRNT cable .

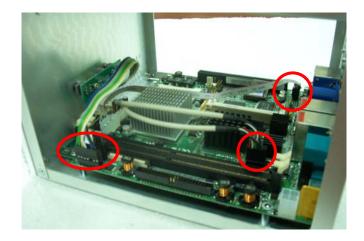

5. Please screw up the motherboard then take it out of Chassis .

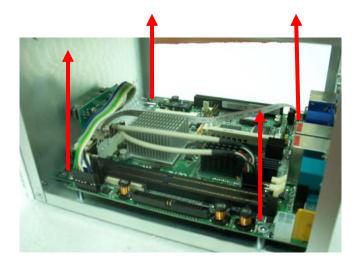


6. After install CPU please screw up the CPU FAN .

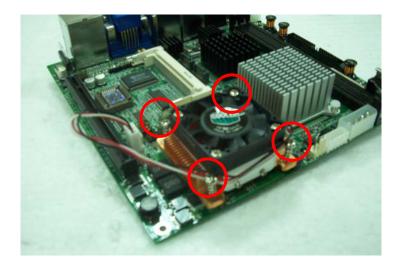

5

7. Please install LV-673 on the chassis then connect to USB , Audio and JFRNT cable .

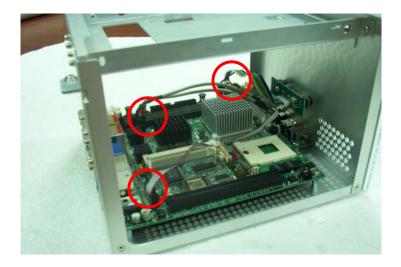

8. Before install HDD drive bay on the chassis , please screw up HDD drive .



9. Please screw up the HDD bay and connect SYS FAN cable on the CN_SYSFAN .



10. Please screw up the VGA card .



7

11. Please install the CD-ROM bay with chassis shell on .



12. Please screw up in back of plastic panel .





Contact Information

Any advice or comment about our products and service, or anything we can help you please don't hesitate to contact with us. We will do our best to support you for your products, projects and business

Taiwan Commate Computer Inc.	
Address	19F, No. 94, Sec. 1, Xintai 5th Rd., Xizhi Dist New Taipei City, Taiwan
TEL	+886-2-26963909
FAX	+886-2-26963911
Website	http://www.commell.com.tw
E-Mail	info@commell.com.tw (General Information) tech@commell.com.tw (Technical Support)
Facebook	https://www.facebook.com/pages/Taiwan-Commate-Computer-Inc/547993955271899
Twitter	https://twitter.com/Taiwan_Commate



9